


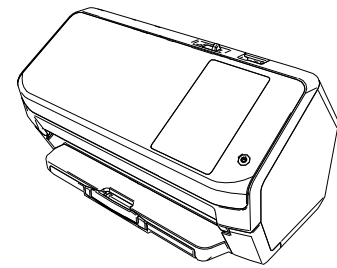


FUJITSU Image Scanner fi-7300NX Getting Started


1




Scanner

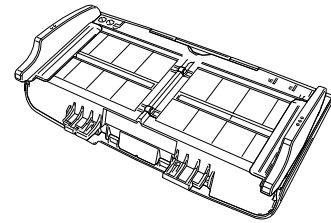

ADF paper chute (feeder)

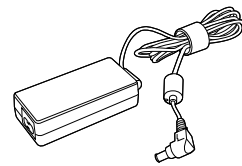


AC adapter

 


AC cable (*)



 
USB cable



Setup DVD-ROM

 

Safety Precautions


 


Getting Started (This sheet)


(*) The contents may vary depending on the country and the model purchased.
 Le contenu risque de différer selon le pays d'achat et le modèle.
 Je nach Land und Modell können sich die Inhalte unterscheiden.
 I contenuti possono variare a seconda del Paese e del modello acquistato.
 Los contenidos pueden diferir de acuerdo al modelo y al país donde adquirió.
 Содержимое может изменяться в зависимости от страны и выбранной модели сканера.
 O conteúdo pode variar dependendo do país e do modelo adquirido.

2


1

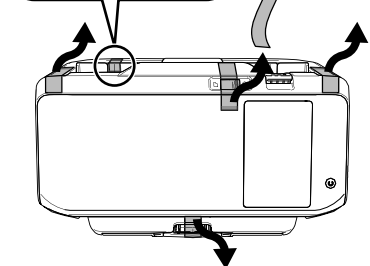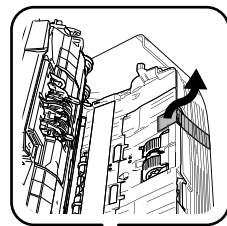


2

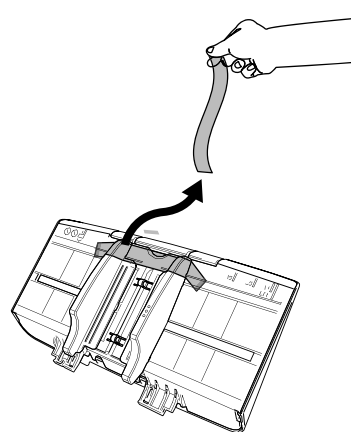














3

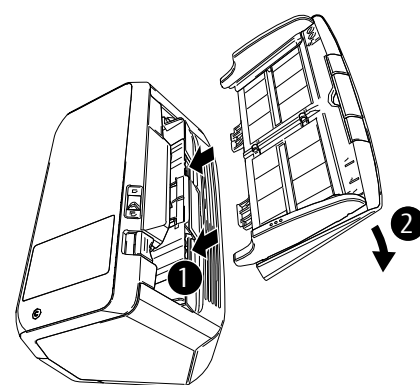

3

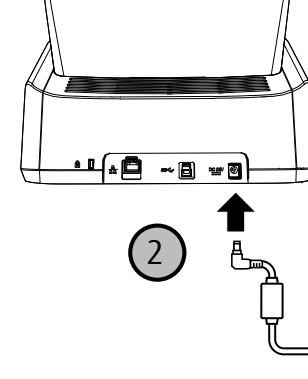

3

  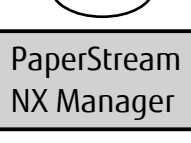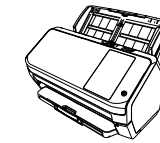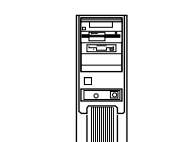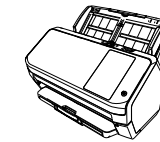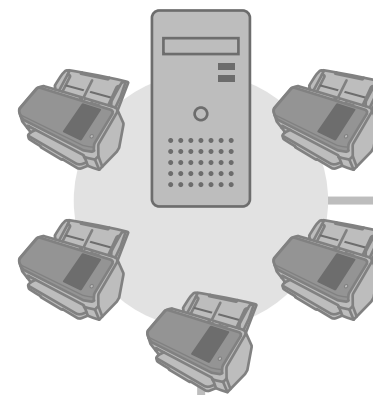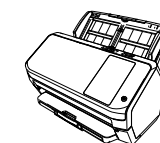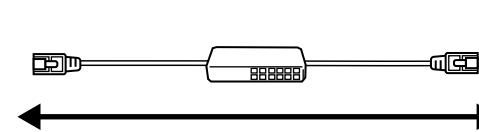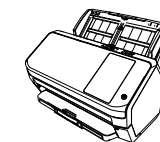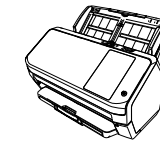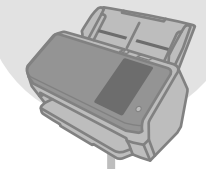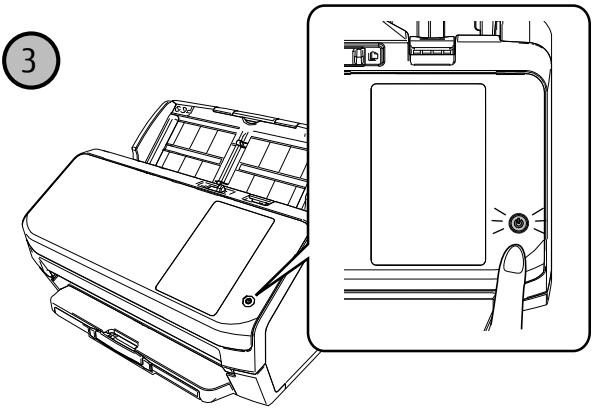



PaperStream NX Manager

4

1

Setup DVD-ROM (*)

2

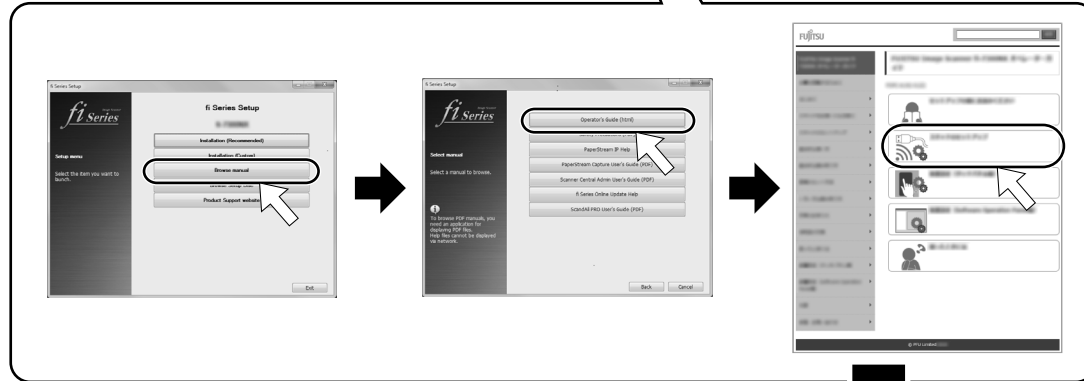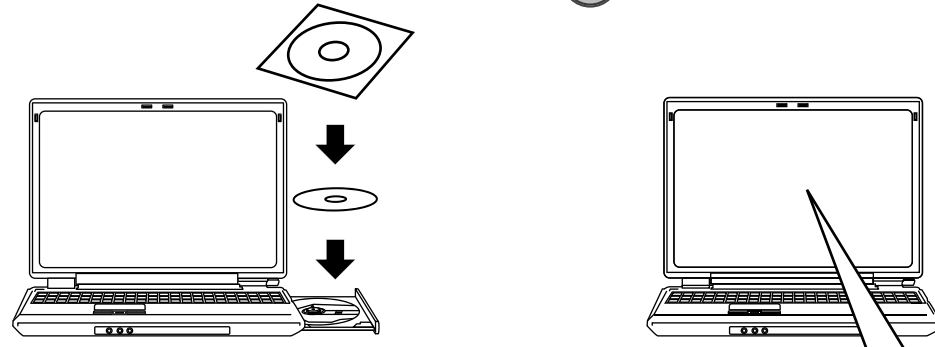

* Please keep this disc safe as it will not be reissued.
Conservez ce disque dans un endroit sûr car ce sera votre seul unique exemplaire.
Bitte bewahren Sie diese Disk sicher auf, da keine Neuauflage erhältlich sein wird.
Non danneggiare il disco perché non verrà ridistribuito.
Mantenha seguro este disco, ya que no se emitirá de nuevo.
Так как диск не будет переиздан, пожалуйста, бережно храните да нный диск.
Mantenha o disco em um local seguro. A segunda via do disco não pode ser emitida.

