

SP Series

Image Scanner Driver for Linux[®]

User's Guide

Contents

Introduction	4
Trademarks	4
Manufacturer.....	4
Issue Date/Issuer	4
Use in High-Safety Applications	4
Abbreviations Used in This Manual.....	5
Screen Examples in This Manual.....	5
Notice	5
Linux Driver Specifications	6
Linux Driver Overview.....	6
Supported Scanners	8
Provided Product Units	9
System Requirements	10
Installation and Uninstallation Procedures	12
Installation Procedure.....	12
Uninstallation Procedure	13
Linux Driver Overview.....	14
Using a SANE API Function Interface	16
Using an Image Scanning Application That Is Built Using the SANE API.....	17
Options for Specifying Scanning Operations and the Output Format (for All Models)	18
Options Related to Scan Parameters (Specific for Each Model)	19
How to Fix Errors That Occur While Performing a Scan.....	30
Scan Button Monitoring Tool.....	34
Management Tool.....	36
How to Use the Management Tool.....	36
Functions, Options, and Setting Values for Arguments	36
Models and Supported Functions	39
Return Values	41
Obtaining the Scanner Information	42
Command to Obtain the Scanner Status	42
Command to Obtain the Scanner Error Information.....	43
Basic Knowledge for Using Linux Drivers	44
Scanners on Linux Platform.....	44

SANE API44

SANE API Function Interface44

Image Scanning Applications44

"scanimage" Usage Examples45

"pfuscgetscerror" Usage Example47

"xsane" Usage Example47

Image Conversion of an Output Image49

Values of the Scanner Information to Be Displayed 51

SP-1120N/SP-1125N/SP-1130N/SP-2230N/SP-2240N 52

Customer Support 55

Introduction

Thank you for using the Image Scanner Driver for Linux®.

This manual describes the overview and operations of this product.

The contents of this manual are subject to change as this product is updated.

Trademarks

Linux® is the registered trademark or trademark of Linus Torvalds in the U.S. and other countries. Red Hat and CentOS Marks are registered trademarks or trademarks of Red Hat, Inc. in the United States and other countries.

Intel is a trademark of Intel Corporation or its subsidiaries in the U.S. and/or other countries.

Microsoft and Windows are trademarks of the Microsoft group of companies.

PaperStream is a registered trademark of PFU Limited in Japan.

Other company names and product names are the registered trademarks or trademarks of the respective companies.

Manufacturer

PFU Limited

YOKOHAMA i-MARK PLACE, 4-5 Minatomirai 4-chome, Nishi-ku, Yokohama-shi, Kanagawa
220-8567 Japan.

Issue Date/Issuer

Issue date: June 2026

Issued by: PFU Limited

© PFU Limited 2018-2026

Use in High-Safety Applications

This product has been designed and manufactured on the assumption that it will be used in office, personal, domestic, regular industrial, and general-purpose applications. It has not been designed and manufactured for use in applications (simply called "high-safety applications" from here on) that directly involve danger to life and health when a high degree of safety is required, for example, in the control of nuclear reactions at nuclear power facilities, automatic flight control of aircraft, air traffic control, operation control in mass-transport systems, medical equipment for sustaining life, and missile firing control in weapons systems, and when provisionally the safety in question is not ensured. The user should use this product with adopting measures for ensuring safety in such high-safety applications. PFU Limited assumes no liability whatsoever for damages arising from use of this product by the user in high-safety applications, and for any claims or compensation for damages by the user or a third party.

Abbreviations Used in This Manual

The following abbreviations are used in this manual.

Name	Indication
Linux®	Linux
Image Scanner Driver for Linux®	Linux driver
Intel®	Intel
Windows®	Windows

Screen Examples in This Manual

The screenshots used in this manual are of Ubuntu.

The actual screen and operations may differ depending on the Ubuntu version and settings in use. If the actual screen differs from the screen examples in this manual, operate by following the actual displayed screen.

Notice

- The contents of this manual are subject to change without notice.
- PFU Limited assumes no liability for incidental or consequential damages arising from the use of this product, and any claims by a third party.
- Copying of the contents of this manual, in whole or in part, as well as the scanner applications is prohibited under the copyright law.

Linux Driver Specifications

The Linux driver specifications are described below.

Linux Driver Overview


The Linux driver is a library program for controlling SP Series scanners in Linux systems.

It provides an application interface based on SANE API. For this reason, if you install the Linux driver in typical Linux systems, you can call the driver from the following applications that support SANE API:

- User Application
- Applications Provided by Ubuntu (such as "scanimage" or "xsane")

The Linux driver also provides the functions for the following tools:

- Scan button monitoring tool
Used to start scanning when the scan button is pressed.
If the scan button monitoring tool is not running, scanning does not start when the scan button is pressed.
For details, refer to [Scan Button Monitoring Tool \(page 34\)](#).
- Management tool
Used to manage consumables and configure the settings such as the period of time before the scanner is automatically turned off or the waiting time before the scanner enters power saving mode.
For details, refer to [Management Tool \(page 36\)](#).

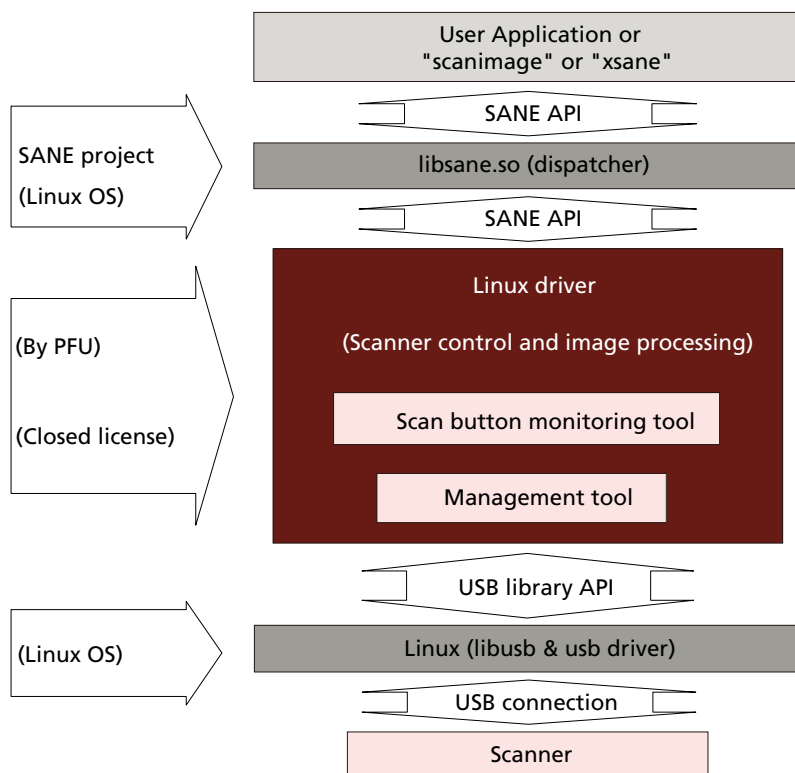

Note:In Linux systems, the term "driver" refers to a module that is installed in the Linux kernel and operates in privilege mode for the CPU. Previously, scanner drivers had been installed in the Linux kernel for operation. Currently, a scanner driver is installed as a library based on SANE API outside the kernel and operates by dynamically linking from applications. Although the scanner driver is actually a library, PFU and other scanner manufacturers call it a "driver".

Supported Scanners

The supported scanners are shown below.

- SP-1120/SP-1125/SP-1130
- SP-1425
- SP-1120N/SP-1125N/SP-1130N (*1)
- SP-2230N/SP-2240N (*1)

***1:**Supports a USB connection only. The scanner cannot be used via a network connection. Do not connect the scanner to a network.

Provided Product Units

This product is provided in a package (installer). The distribution name and CPU architecture that correspond to each package are shown below.

Distribution name and CPU architecture	Package (installer) file name	Package format
Ubuntu 64-bit	pfusp-ubuntu_X.X.X_amd64.deb	deb

The file names have the meanings shown below.

Ubuntu: The Linux distribution name that is supported by this package.

X.X.X: Driver version number "X.X.X" should be read as the version number of the Linux driver used.

amd64: Supported CPU architecture

deb: Package format

System Requirements

The system requirements are shown below.

- **Operating system**

Ubuntu Desktop

For details about supported version numbers, refer to the download site for Linux drivers.

- **Hardware**

CPU Architecture	Intel or Intel-compatible processor (64-bit)
Disk Space Required	6 MB

- **Operation verification tools**

The image scanning applications "scanimage" and "xsane" can be used as operation verification tools with many versions of Linux. PFU has not verified other applications that support SANE API.

Application Name	Application Description
scanimage	<p>Command line based image scanning application. Command line options can be used to specify detailed settings for scanning.</p> <p>Because this application is included in the distributions for Ubuntu, it can be used after Ubuntu is installed.</p>
xsane	<p>Image scanning application for a GUI environment. Detailed settings can be specified when scanning in a GUI screen. Because this application is not included in the distribution, it cannot be used immediately after Ubuntu is installed. To use "xsane", the package must be downloaded from the Ubuntu distributor.</p> <p>To download and install the package, follow the procedure below.</p> <ol style="list-style-type: none"> 1 Connect a computer to the Internet. 2 Open the terminal software. 3 Execute the "sudo" command, enter the password for the superuser (root user) to become a root user. <div style="border: 1px solid black; padding: 2px; margin: 5px 0;">sudo su -</div> 4 Use the command below to connect to the Ubuntu server and check the latest package information, and then download it. <div style="border: 1px solid black; padding: 2px; margin: 5px 0;">apt-get update apt-get install xsane</div>

Application Name	Application Description
	In an environment where a proxy server is used to connect to the Internet, Ubuntu that is installed in the computer needs to be configured. Configure Ubuntu based on the specific proxy server environment.

Installation and Uninstallation Procedures

Procedures are shown below for installation and uninstallation of the Linux driver.

Installation Procedure

An example of the procedure to install the Linux driver (Ubuntu 64-bit) is shown below.

Obtaining the Linux driver

The Linux driver can be downloaded from the following website.

<https://www.pfu.rioh.com/global/scanners/fi/dl/index-sps.html>

For details, contact the distributor/dealer where you purchased your scanner.

Preparation

- Copy the package that was downloaded from the website to the installation target computer.
- Disconnect the scanner from the computer before installing the driver.

Install the Linux driver in the following procedure:

- 1 After starting Ubuntu and logging in, open the terminal software.**
- 2 Execute the "sudo" command, enter the password for the superuser (root user) to become a root user.**

```
sudo su -
```

- 3 Execute the command below, and check that the type of Ubuntu system is the 64-bit version.**

```
uname -m
```

TIP

To find out the type of system, use the "uname" command. The type of system is shown as a result of the command that was executed.

Display Result	Type of System
i386 or i686	32-bit
x86_64	64-bit

- 4 Use the "cd" command to move to the folder where the package is located.**
- 5 Execute the command below to install the package.**

```
dpkg -i pfusp-ubuntu_X.X.X_amd64.deb
```

TIP

For "X.X.X", specify the version number of the Linux driver used.

- 6 Execute the command below, and check that the package was installed correctly.

```
dpkg -l pfusc
```

If the package name "pfusc" appears, the installation of the Linux driver was successful.

- 7 Connect the scanner, and turn on the power.
- 8 Start an operation verification tool such as "scanimage" or "xsane", and check the scanning operation.

Uninstallation Procedure

Preparation

- Disconnect the scanner from the computer before uninstalling the driver.

Uninstall the Linux driver in the following procedure:

- 1 After starting Ubuntu and logging in, open the terminal software.
- 2 Execute the "sudo" command, enter the password for the superuser (root user) to become a root user.

```
sudo su -
```

- 3 Execute the command below to uninstall the package.

```
dpkg -r pfusc
```

- 4 Execute the command below to delete the package information.

```
dpkg --purge pfusc
```

- 5 Execute the command below, and check that the package was uninstalled correctly.

```
dpkg -l pfusc
```

If the "pfusc" package information is not displayed, the Linux driver is uninstalled successfully.

TIP

Uninstalling the Linux driver does not delete any images that were scanned before the uninstallation.

Linux Driver Overview

This product provides the SANE API as a library for using the functions of this product from applications that support the SANE API (such as user application, "scanimage", and "xsane").

To use this product to scan a document with a scanner, use one of the methods below.

- Using a SANE API function interface
This method is used to control the scanner directly with a C-language application.
For details about a SANE API function interface, refer to [Using a SANE API Function Interface \(page 16\)](#).
- Using an image scanning application (such as "scanimage" or "xsane") that is built using the SANE API
This method is used to configure the scan settings from the OS standard CUI or a GUI application in order to scan a document.
For details about an application that is built using the SANE API, refer to [Using an Image Scanning Application That Is Built Using the SANE API \(page 17\)](#).

A function overview of this driver and a comparison on the specifications with drivers for other operating systems are shown in the table below.

No.	Function	Linux Driver	PaperStream IP Driver
1	Supported operating system	Ubuntu	Windows
2	Supported architecture	Intel x86_64	Intel x86/x86_64
3	32-bit CPU support	–	✓
4	64-bit CPU support	✓	✓
5	Download from a public site	✓	✓
6	Installer format	deb	Unique
7	Installer size	2 MB	100 MB
8	License	Unique	Unique
9	Image scanning application	Not included	Included
10	Profile	–	✓
11	Paper source (Front/Rear/Duplex/Flatbed) (*1)	✓	✓
12	Resolution	50 to 600 dpi	50 to 1200 dpi
13	Image type (Color/grayscale/binary black & white)	✓	✓
14	Paper size (Custom)	✓	✓

No.	Function	Linux Driver	PaperStream IP Driver
15	Paper size (Standard sizes)	✓ (Various)	✓ (Various)
16	Cropping	✓ (*2)	✓
17	Rotation (90°, 180°, 270°)	–	✓
18	Rotation (Automatic)	–	✓
19	Multifeed detection	✓	✓
20	Brightness	✓	✓
	Contrast	✓	✓
	Shadow	✓ (*3)	✓
	Highlight	✓ (*3)	✓
	Gamma	✓ (*3)	✓
21	Binarization method	SDTC	✓ (SDTC)
		Static threshold	✓
		Error diffusion	✓
22	Dropout color	None/R/G/B/W	None/R/G/B/W/ Custom
23	Sharpness	✓	✓
24	Inverted image	–	✓
25	Automatic color/black & white detection	–	✓
26	Blank page detection	✓	✓
27	Blank page detection (sensitivity)	✓	✓
28	sRGB correction	–	✓
29	Hole punch removal	–	✓
30	Multi image output	–	✓

No.	Function	Linux Driver	PaperStream IP Driver
31	Separation	–	✓
32	Digital endorser	–	✓
33	Asynchronous (pre-read)	✓	✓
34	Setting the waiting time before the scanner enters power saving mode	✓ (management tool)	✓
35	Setting the time period before the scanner is automatically turned off when it is left unused	✓ (management tool)	✓
36	Scanning with the Scan button	✓	✓
37	Obtaining the scanner status	✓(*3)	✓
38	Obtaining the scanner error information	✓(*3)	✓

✓: Supported

–: Not supported

*1: Flatbed is supported with SP-1425.

*2: Overscan is supported with SP-1120N/SP-1125N/SP-1130N/SP-2230N/SP-2240N.

*3: This is supported with SP-1120N/SP-1125N/SP-1130N/SP-2230N/SP-2240N.

Using a SANE API Function Interface

The SANE API supports the following SANE API functions:

sane_init()

Initializes a scanner library

sane_exit()

Exits the scanner library

sane_get_device()

Obtains a scanner device

sane_open()

Opens a scanner device

sane_close()

Closes a scanner device

sane_get_option_description()

Obtains option parameters

sane_control_option()

Sets option parameter values

sane_get_parameters()

Obtains option parameter values

sane_start()

Starts a scan

sane_read()

Reads data from a scanner

sane_cancel()

Cancels a scanner operation

sane_set_io_mode()

Sets I/O mode

sane_get_select_fd()

Obtains a file descriptor

sane_strstatus()

Obtains a scanner status

For details about how to call the SANE API functions and how they work, refer to the site below.

<http://www.sane-project.org/html/>

Using an Image Scanning Application That Is Built Using the SANE API

"scanimage" is an application which runs with the SANE API.

You can specify scan parameters to perform a scan by specifying an option for the "scanimage" command.

The following two types of options are available for the "scanimage" command. Specify a combination of the two types.

- **Options for specifying scanning operations and the output format (for all models)**

These are the options for specifying scanning operations and the output format, which are common for all models.

An example of the options for specifying scanning operations and the output format, which are common for all models, is shown below.

Option	Function
--format=tiff	Output file format
--batch=/tmp/out-image-sample%d.tiff	Output file name
-n	Checks the specified options (a scan is not performed).
--batch-count=3	Scans 3 pages (images).
--batch-increment=2	Increments %d in the output file name by two.
--help	Displays Help messages.

- **Options related to scan parameters (specific for each model)**

These are the options related to scan parameters.

An example of options related to scan parameters is shown below.

Option	Function
--source Adf-front	Scans the front side of a document in the ADF.
--resolution 300	Resolution 300
--autofeed=no	Does not use the cache in the scanner.

Options for Specifying Scanning Operations and the Output Format (for All Models)

The "scanimage" command can be used to display a list of options that can be specified.

An example of the results of the command executed with "scanimage --help" specified is shown below.

When a scanner that is connected to a computer can be used, executing this command displays a list of options that can be specified for all models and then displays a list of options that can be specified for the model in use.

Usage: scanimage [OPTION]...

Start image acquisition on a scanner device and write image data to standard output.

Parameters are separated by a blank from single-character options (e.g.

-d epson) and by a "=" from multi-character options (e.g. --device-name=epson).

-d, --device-name=DEVICE use a given scanner device (e.g. hp:/dev/scanner)

--format=pnm|tiff|png|jpeg file format of output file

-i, --icc-profile=PROFILE include this ICC profile into TIFF file

-L, --list-devices show available scanner devices

-f, --formatted-device-list=FORMAT similar to -L, but the FORMAT of the output can be specified: %d (device name), %v (vendor), %m (model), %t (type), %i (index number), and %n (newline)

-b, --batch[=FORMAT] working in batch mode, FORMAT is `out%d.pnm' `out%d.tif' `out%d.png' or `out%d.jpg' by default depending on --format. This option is incompatible with --output-file.

--batch-start=# page number to start naming files with

--batch-count=# how many pages to scan in batch mode

--batch-increment=# increase page number in filename by #

--batch-double increment page number by two, same as --batch-increment=2

--batch-print print image filenames to stdout

--batch-prompt ask for pressing a key before scanning a page

--accept-md5-only only accept authorization requests using md5

-p, --progress print progress messages

-o, --output-file=PATH save output to the given file instead of stdout.

This option is incompatible with --batch.

-n, --dont-scan only set options, don't actually scan

-T, --test test backend thoroughly

-A, --all-options list all available backend options

-h, --help display this help message and exit

-v, --verbose give even more status messages

-B, --buffer-size=# change input buffer size (in kB, default 32)

-V, --version print version information

Options Related to Scan Parameters (Specific for Each Model)


A list of options related to scan parameters (specific for each model) that can be specified when using the "scanimage" command is shown below.

Default settings are indicated in **bold characters**.

When using this product with "xsane", the setting items corresponding to the options below can be specified on the "xsane" setting screen.

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
Paper source	--source	Flatbed	Flatbed: Flatbed Adf-front: Front side Adf-back: Back side Adf-duplex: Both sides "Flatbed" can be specified when the scanner is equipped with a flatbed.
		Adf-front	
		Adf-back	
		Adf-duplex	
Image type	--mode	Lineart	Black & White
		Gray	Grayscale
		Color	Color
Resolution	--resolution	50 to 600 (200)	<ul style="list-style-type: none"> Specify the number of pixels per inch. Settable in units of 1 dpi.
Paper width	--page-width	SP-1425 when the ADF used: 114 to 216 (210.0) Other models: 26 to 216 (210.0)	<ul style="list-style-type: none"> This setting is enabled when "Custom" is specified for "--paper-size" (unit: mm). (*1) This setting is disabled when "Flatbed" is specified for "--source".
Paper length	--page-height	SP-1120/SP-1125/ SP-1130: <ul style="list-style-type: none"> 50 to 300 dpi 26 to 863.6 (297.0) 301 to 600 dpi 26 to 355.6 (297.0) SP-1425 when the ADF used: <ul style="list-style-type: none"> 50 to 200 dpi 140 to 3175.0 (297.0) 201 to 600 dpi 140 to 863.6 (297.0) SP-1120N/SP-1125N/ SP-1130N: <ul style="list-style-type: none"> 50 to 200 dpi 26 to 3175.0 (297.0) 201 to 300 dpi 	<ul style="list-style-type: none"> This setting is enabled when "Custom" is specified for "--paper-size" (unit: mm). (*1) This setting is disabled when "Flatbed" is specified for "--source".

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
		26 to 863.6 (297.0) • 301 to 600 dpi 26 to 355.6 (297.0) SP-2230N/SP-2240N: • 50 to 200 dpi 26 to 6096.0 (297.0) • 201 to 300 dpi 26 to 5461.0 (297.0) • 301 to 400 dpi 26 to 4064.0 (297.0) • 401 to 600 dpi 26 to 2700.0 (297.0)	
Scanning area (Top-left x)	-l	0 to (the value specified for --page-width minus 26) (0)	<ul style="list-style-type: none"> • If the ADF is used, this setting is enabled when "Custom" is specified for "--paper-size" (unit: mm). (*1) • This setting is disabled when "yes" is specified for "--page-auto" or "Overscan" is specified for "--cropping". • The maximum values that can be specified when "Flatbed" is specified for "--source" are as follows: -x: 216 -y: 297 • -x and -y may be interpreted differently depending on the scanning tool. scanimage interprets -x and -y as the size (width and height) of a scanning area. xsane interprets -x and -y as the bottom right of a scanning area.
Scanning area (Top-left y)	-t	0 to (the value specified for --page-height minus 26) (0)	
Scanning area (Bottom-right x)	-x	26 to --page-width (210.0)	
Scanning area (Bottom-right y)	-y	26 to --page-height (297.0)	

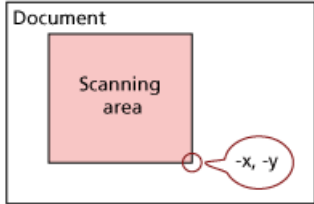Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
			
Paper type	--paper-size	Custom A4 A5 A6 (*2) B5 B6 Letter Legal Folio Executive (*3) Postcard (*2) Business-card (*2)	<ul style="list-style-type: none"> When "Custom" is specified, scanning is performed within the range of the setting values for "--page-height" and "--page-width". This setting is disabled when "Flatbed" is specified for "--source". The supported paper sizes are shown below. A4: 210 × 297 mm A5: 148 × 210 mm A6: 105 × 148 mm B5: 182 × 257 mm B6: 128 × 182 mm Letter: 216 × 279.4 mm Legal: 216 × 355.6 mm Folio: 216.0 × 330.0 mm Executive: 184.15 × 266.7 mm Postcard: 100 × 148 mm Business-card: 90 × 55 mm
Cropping	--page-auto	=(yes no)	<ul style="list-style-type: none"> When "yes" is specified for "--page-auto" or "--page-auto" is omitted, the following settings are disabled: ADF: <ul style="list-style-type: none"> --l (Top-left x) --t (Top-left y) --x (Bottom-right x) --y (Bottom-right y)

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
			<p>Flatbed:</p> <ul style="list-style-type: none"> - --l (Top-left x) - --t (Top-left y) <ul style="list-style-type: none"> ● "--cropping" and "-page-auto" cannot be specified together. ● The maximum paper sizes that can be scanned vary depending on the resolution. (*4) However, the actual paper sizes that can be scanned depends on the computer environment.
Cropping method (Overscan) * This setting cannot be specified for SP-1120/SP-1125/SP-1130/SP-1425.	--cropping	<p>Old_specification</p> <hr/> Overscan	<ul style="list-style-type: none"> ● When "Old_specification" is specified for "--cropping", the "scanimage" command runs with the default setting (yes) for "--page-auto". ● When "Overscan" is specified for "--cropping", an image that is a little larger than the size specified for "--paper-size" is output. When "Custom" is specified for "--paper-size", the values specified for "page-height" and "page-width" are enabled. When a specific size is specified for "--paper-size", the values specified for "page-height" and "page-width" are disabled. ● When "Overscan" is specified for "--cropping", the following settings are disabled: <ul style="list-style-type: none"> - --l (Top-left x) - --t (Top-left y) - --x (Bottom-right x) - --y (Bottom-right y)

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
			<ul style="list-style-type: none"> This setting is disabled when "Flatbed" is specified for "--source".
Binarization method	--bw-mode	SDTC	This setting is enabled when "Lineart" is specified for "--mode". SDTC: Automatic Threshold: Static threshold Error-diffusion: Error diffusion
		Threshold	
		Error-diffusion	
Binarization method (Static Threshold)	--threshold	0 to 255 (128)	This setting is enabled when "Threshold" is specified for "--bw-mode".
Brightness	--brightness	-127 to 127 (0)	The higher the specified value is, the brighter the image becomes.
Contrast	--contrast	-127 to 127 (0)	The higher the specified value is, the clearer the contrast in the image becomes.
Shadow * This setting cannot be specified for SP-1120/SP-1125/SP-1130/SP-1425.	--shadow	0 to 254 (0)	SP-1120N/SP-1125N/SP-1130N: <ul style="list-style-type: none"> When "Color" or "Gray" is specified for "--mode", the default values are as follows: Shadow: 10, Highlight: 230, Gamma: 1.6
Highlight * This setting cannot be specified for SP-1120/SP-1125/SP-1130/SP-1425.			--highlight 1 to 255 (255) <ul style="list-style-type: none"> When "Lineart" is specified for "--mode", the default values are as follows: Shadow: 0, Highlight: 255, Gamma: 1.0 For "Shadow", specify a value lower than the value specified for "Highlight".
Gamma * This setting cannot be specified for SP-1120/SP-1125/SP-1130/SP-1425.	--gamma	0.1 to 10 (1.0)	SP-2230N/SP-2240N: <ul style="list-style-type: none"> When "Lineart" or "Color" is specified for "--mode", the default values are as follows: Shadow: 0, Highlight: 255, Gamma: 1.0

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
			<ul style="list-style-type: none"> • When "Gray" is specified for "--mode", the default values are as follows: Shadow: 10, Highlight: 230, Gamma: 1.6 • For "Shadow", specify a value lower than the value specified for "Highlight". • When the default values are specified for "Shadow", "Highlight", and "Gamma" in xsane, these values will be changed if the setting for "--mode" is changed. However, when values other than the default values are specified, these values will not be changed even if the setting for "--mode" is changed.
Multifeed detection	--multifeed-detection	Do-not-detect	Do-not-detect: Do not detect a multifeed Stop: Detect a multifeed SP-2230N/SP-2240N: "Stop" is the default setting. Other models: "Do-not-detect" is the default setting.
		Stop	
Detecting multifeeds by the overlapping of documents	--mf-overlapping	=(yes no)	This setting is enabled when "Stop" is specified for "--multifeed-detection".
Detecting multifeeds by the length of the document * This setting can be specified for SP-2230N/SP-2240N.	--mf-length	=(yes no)	This setting is enabled when "Stop" is specified.

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
Dropout color	--dropoutcolor	White	This setting is enabled when "Gray" or "Lineart" is specified for "--mode".
		Red	
		Green	
		Blue	
		None	
Sharpness	--cleanup-sharpness	None	<ul style="list-style-type: none"> • The sharpness is not adjusted and images are not enhanced. • This setting is enabled when "Color" or "Lineart" is specified for "--mode".
		Smoothing	This setting is enabled when "Lineart" is specified for "--mode".
		Emphasis-level-1	This setting is enabled when "Color" or "Lineart" is specified for "--mode".
		Emphasis-level-2	
		Emphasis-level-3	
		Descreen-level-1	This setting is enabled when "Color" is specified for "--mode".
		Descreen-level-2	
		Descreen-level-3	
		Descreen-level-4	
		Blank page skip	--blank-page-skip
Blank page skip (sensitivity)	--blank-page-skip-sensitivity	1 to 5 (3)	<p>This setting is enabled when "yes" is specified for "--blank-page-skip". The determination sensitivity is specified.</p> <p>1: Less likely to detect blank pages 3: Normal detection setting 5: More likely to detect blank pages</p>
Binarization method (SDTC level)	--bw-sdtk-variance	Low	This setting is enabled when "SDTC" is specified for "--bw-mode". It specifies the SDTC level.
		Mid	
		High	

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
Preceding scan	--autofeed	= (yes no)	If the ADF is used, preceding scans are performed using the cache memory in the scanner. Because all sheets that are loaded in the ADF paper chute (feeder) are fed, if an application stops the scanning process along the way, the scanned images that remain in the cache memory are discarded.
Obtaining the scanner status * This setting cannot be specified for SP-1120/SP-1125/SP-1130/SP-1425.	--get-sc-status	– (no arguments)	<ul style="list-style-type: none"> ● Obtains 4-byte numbers that indicate the scanner status. For details, refer to Values of the Scanner Information to Be Displayed (page 51). ● The information related to the scanner status is collected from a scanner every time the "scanimage" command is executed. ● Executing this option repeatedly at short 1 second or less intervals puts a heavy load on the system. ● This option is disabled even if it is specified. You can refer to the scanner status by executing "scanimage --help". (Example) --get-sc-status <string> [0x80000000]
Obtaining the scanner error information * This setting cannot be specified for SP-1120/SP-1125/SP-1130/SP-1425.	--get-sc-error	– (no arguments)	<ul style="list-style-type: none"> ● Obtains the information of an error that occurred with the last scan as a 4-byte number. For details, refer to Values of the Scanner Information to Be Displayed (page 51). ● The scanner error information is collected when a scan is performed with a scanner.

Function	Option (Syntax)	Settable values of argument (Bold: Default setting)	Notes
			<p>In addition, only the user who performed a scan can obtain the information.</p> <ul style="list-style-type: none"> ● When performing a scan continuously, you can only refer to the last error information. ● Executing this option repeatedly at short 1 second or less intervals puts a heavy load on the system. ● The error information regarding the period from the time a scanner is turned on to the time the first scan is performed cannot be obtained. ● This option is disabled even if it is specified. You can refer to the error information by executing "scanimage --help". (Example) --get-sc-error <string> [0x03800320]

*1:The value may be rounded off depending on the application.

*2:This is supported with the following scanner models:

- SP-1120/SP-1125/SP-1130
- SP-1120N/SP-1125N/SP-1130N
- SP-2230N/SP-2240N

*3:This is supported with the following scanner models:

- SP-1120N/SP-1125N/SP-1130N
- SP-2230N/SP-2240N

*4:The maximum paper sizes of documents that can be scanned with the ADF according to the resolution are as follows:

- SP-1120/SP-1125/SP-1130
 - 50 to 300 dpi
26 to 863.6 mm
 - 301 to 600 dpi
26 to 355.6 mm

- SP-1425
 - 50 to 200 dpi
140 to 3175.0 mm
 - 201 to 600 dpi
140 to 863.6 mm
- SP-1120N/SP-1125N/SP-1130N
 - 50 to 200 dpi
26 to 3175.0 mm
 - 201 to 300 dpi
26 to 863.6 mm
 - 301 to 600 dpi
26 to 355.6 mm
- SP-2230N/SP-2240N
 - 50 to 200 dpi
26 to 6096.0 mm
 - 201 to 300 dpi
26 to 5461.0 mm
 - 301 to 400 dpi
26 to 4064.0 mm
 - 401 to 600 dpi
26 to 2700.0 mm

ATTENTION

In some applications, if the specified value for a parameter is out of the specified range, the value may be replaced with the maximum value or the minimum value in the range.

TIP

- You can check the list of these options and values that can be set for the options when Linux driver is installed and the scanner that you want to use is turned on and connected to the computer. Execute the following command to display a list of options and a list of values that can be specified.

```
scanimage --help
```

- For an option that requires the argument "yes" or "no", if you do not specify either of the arguments, the option is executed with the "yes" argument specified.
- The values specified for the "scanimage" command are reset every time the command is executed. The values are not carried over even if the "scanimage" command is executed repeatedly. If a value is omitted, the default value is used.

How to Fix Errors That Occur While Performing a Scan

This section describes how to fix errors that occur while performing a scan. The display messages for various types of errors that occur when scanning by "scanimage" are also included for reference.

Return code in SANE API	Message displayed in "scanimage" (Reference)	Cause, Result of the Cause, and the Corrective Action
SANE_STATUS_IO_ERROR	Error during device I/O	<p>Cause</p> <p>The USB cable was disconnected during a scanning process.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>Reconnect the USB cable to the computer. Turn the scanner off, and then turn it on again.</p>
SANE_STATUS_IO_ERROR	Error during device I/O	<p>Cause</p> <p>The power cable was disconnected during a scanning process.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>Connect the power cable properly. To disconnect and connect the power cable, an interval of 5 or more seconds is required. After reconnecting the power cable, turn the scanner on. Exit the application and start it again.</p>
SANE_STATUS_IO_ERROR	Error during device I/O	<p>Cause</p> <p>Scanning is performed without unlocking the transport lock.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p>

Return code in SANE API	Message displayed in "scanimage" (Reference)	Cause, Result of the Cause, and the Corrective Action
		<p>Corrective Action</p> <p>Turn off the scanner, unlock the transport lock, and try scanning again.</p>
SANE_STATUS_NO_DOCUMENTS	Document feeder out of documents	<p>Cause</p> <p>There are no documents left in the ADF paper chute (feeder) during a scanning process.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>If more documents need to be scanned, load the documents in the ADF paper chute (feeder), and try scanning again.</p>
SANE_STATUS_JAMMED	Document feeder jammed	<p>Cause</p> <p>A document jam occurred during a scanning process.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>Open the ADF cover, remove the jammed document, and then try scanning again. If document jams occur frequently, clean the inside of the scanner.</p>
SANE_STATUS_COVER_OPEN	Scanner cover is open	<p>Cause</p> <p>The ADF cover is open during a scanning process.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>Close the ADF cover, reload the documents, and then try scanning again.</p>

Return code in SANE API	Message displayed in "scanimage" (Reference)	Cause, Result of the Cause, and the Corrective Action
SANE_STATUS_CANCELLED	Operation was cancelled	<p>Cause</p> <p>Scanning is canceled during a scanning process.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>A document may be remaining in the scanner. Open the ADF cover and remove the document.</p>
SANE_STATUS_UNREPORTED	unrecognized option Example: <pre data-bbox="459 882 719 1093">#scanimage --page -size=A4 >pfu.pnm #unrecognized option '--page-size=A4</pre>	<p>Cause</p> <p>An incorrect option was specified.</p> <p>Result of the Cause</p> <p>The scanner does not start scanning and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>Specify the correct option, and then try scanning again.</p>
SANE_STATUS_GOOD	rounded value of XX from XX to XX Example: <pre data-bbox="459 1346 719 1556">#scanimage --contrast 128 >pfu.pnm # rounded value of contrast from 128 to 127</pre>	<p>Cause</p> <p>A value outside the allowable range was specified for a setting parameter, but the value was corrected to a value within the allowable range and the scanning operation was completed successfully.</p> <p>Result of the Cause</p> <p>If a value outside the allowable range was specified, the scanner scans a document after the value is changed to a value within the allowable range. A message appears indicating that the value was changed.</p> <p>Corrective Action</p> <p>Not needed.</p>
SANE_STATUS_NO_MEMORY	Out of memory	<p>Cause</p> <p>Memory ran out during a scanning process.</p>

Return code in SANE API	Message displayed in "scanimage" (Reference)	Cause, Result of the Cause, and the Corrective Action
		<p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>If other applications are running, exit all applications other than the image scanning application. Also, change the settings such as the resolution and the paper size to reduce the image size and scan again. In addition, some parameters tend to consume memory. Disable the cropping parameter and the blank page skip parameter and try again. If the problem persists, add memory.</p>
SANE_STATUS_CANCELLED	Operation was cancelled	<p>Cause</p> <p>The STOP button was pressed to cancel scanning.</p> <p>Result of the Cause</p> <p>The scanner stops the scanning process and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>A document may be remaining in the scanner. Open the ADF cover and remove the document.</p>
SANE_STATUS_DEVICE_BUSY	Open of device pfusc:xx:xx:xx failed: Device busy	<p>Cause</p> <p>Possible causes are as follows:</p> <ul style="list-style-type: none"> • The scanner is used with another application. • The scanner is used by another user, who uses the network to establish a connection with the scanner. <p>Result of the Cause</p> <p>The scanner does not start scanning and the image scanning application returns an error.</p> <p>Corrective Action</p> <p>Make sure that the scanner is not used with another application or that the scanner is not used by another user, and then restart this driver.</p>

Scan Button Monitoring Tool

This tool monitors the [Scan] button of the scanner and performs a scan by executing the "scanimage" command when it detects that the [Scan] button was pressed.

The usage is described below.

- **How to start or stop the monitoring tool**

The monitoring tool is not started in the state immediately after installation.

Perform the operation below as the superuser (root user) to enable starting and stopping.

Starting the monitoring tool

```
/etc/init.d/pfuspscanbutton start
```

Stopping the monitoring tool

```
/etc/init.d/pfuspscanbutton stop
```

The monitoring tool must be registered to be started automatically when the system is started.

The system is managed by "update-rc.d".

- **Output location of image data**

When scanning is performed by pressing the [Scan] button, a folder with a name indicating the current time is created under the folder below, and the image is stored there.

```
/opt/pfusp/image
```

The attributes of the scanned image are shown below. Also, the image is output in the PNM format by default.

```
Owner: root
```

```
Permissions: 644
```

- **Changing the scan parameters**

When the [Scan] button is pressed, the scan process is performed based on the configuration file below.

```
/opt/pfusp/etc/pfuspscanbutton.conf
```

To change the scan parameters, change the values in the configuration file as the superuser (root user) in any text editor. Due to the "scanimage" specifications, images can be output in a limited number of formats. To convert an image to another format, use an application or tool for converting images to other formats.

Configuration file example: A configuration file with the settings below is saved upon installation.

```
--batch --format=png --source Adf-duplex --mode Color --resolution 200 --autofeed=yes
```

TIP

The contents of the configuration file cannot be written as a shell script. The configuration file can be used only as an option for the "scanimage" command.

By default, images are saved in the "/opt/pfusp/image" directory. However, you can change the save destination by using the "batch" option as follows.

```
--batch=/tmp/Image-%d.pnm --format=pnm --source Adf-duplex --mode Color
--resolution 200 --autofeed=yes
```

- **Notes**

- When the scanner is in use (for example, when a scanning application is using the scanner), the monitoring tool cannot start scanning even if the [Scan] button is pressed. On the other hand, when a scan is being performed by the monitoring tool due to the [Scan] button being pressed, other applications cannot start scanning. The function to stop/resume scanning with the Scan button is not supported.
- The monitoring tool can monitor only one scanner. When multiple scanners are connected to the computer, the monitoring tool does not run correctly.
- Error messages that are generated during a scan are output in the following file.

```
/var/log/pfusp/ScanbuttonErrlog_[UserID].log
```

The file is overwritten with an error message output every time an error occurs. Each error message contains a text based on an error returned by "scanimage".

- To obtain the scanner error information, execute the "pfuspgetscerror" command as the superuser (root user).

Management Tool

The management tool allows you to maintain the scanner and configure the settings such as the waiting time before the scanner enters power saving mode and the period of time before the scanner is automatically turned off when it is left unused.

Details on how to use this management tool and its functions are described below.

How to Use the Management Tool

Specify an option and an argument for the "pfuscusconsumables" command and then execute the command.

Root privileges are required depending on the option you specify.

```
# pfuscusconsumables <option> <setting value for an argument>
```

Example:The command for setting the scanner to be automatically turned off

```
# pfuscusconsumables --power-off 1-hour
```

Functions, Options, and Setting Values for Arguments

No.	Function	Option	Setting value for an argument	Notes
1	Listing the scanners that are connected	-L or --list-devices	None	The following information is displayed for each scanner that is connected: <ul style="list-style-type: none"> • Scanner name • USB bus number • Port number
2	Specifying a scanner	-d or --device-name	Scanner name:USB bus number:port number Example: SP-1120:001:003 SP-1425:002:004 SP-1120N:003:005 SP-2240N:002:002	If you do not specify this option, the scanner that is detected first is specified. For the USB bus number and the port number, specify the values that are listed when the command is executed with option "-L" or "--list-devices" specified.
3	Displaying the Help information	-h or -help	None	The Help information for the management tool is displayed.

No.	Function	Option	Setting value for an argument	Notes
4	Displaying the version of the management tool	-V or -version	None	The version of the management tool is displayed.
5	Displaying the scanner information	--info	None	The following information about the scanner is displayed: <ul style="list-style-type: none"> • Scanner name • Firmware version • The date when the scanner was used for the first time (*2) • Serial number • Consumable counters • Waiting time before the scanner enters power saving mode/time period before the scanner is automatically turned off when it is left unused
6	Clearing the number of sheets scanned after cleaning (*1)	--after-cleaning-clear	None	The number of sheets scanned after cleaning is cleared.
7	Clearing the counter number for the roller set (*1)	--roller-set-clear	None	The counter number for the roller set is cleared.
8	Clearing the counter number for the pad unit (*1)	--pad-clear	None	The counter number for the pad unit is cleared.
9	Clearing the counter number for the brake roller (*1)	--brake-roller-clear	None	The counter number for the brake roller is cleared.
10	Clearing the counter number for the pick roller (*1)	--pick-roller-clear	None	The counter number for the pick roller is cleared.
11	Setting the waiting time before the	--sleeptimer	5 to 115	Specify a value for the waiting time before the scanner enters power saving mode in minutes in multiples

No.	Function	Option	Setting value for an argument	Notes
	scanner enters power saving mode (*1)			of 5. If the specified time is not in multiples of 5, it is rounded down to the time in multiples of 5. Set the waiting time before the scanner enters power saving mode to a value shorter than the time before it automatically turns off.
12	Setting the time period before the scanner is automatically turned off when it is left unused (*1)	--power-off	inactive	Specify "inactive" to keep the scanner on even when it is left unused or specify one of the following time periods before the scanner is automatically turned off. <ul style="list-style-type: none"> • 20-minutes (SP-2230N/ SP-2240N only) • 1-hour • 2-hours • 4-hours • 8-hours When "inactive" is specified, the scanner's power consumption will increase.
			20-minutes	
			1-hour	
			2-hours	
			4-hours	
			8-hours	
13	Setting the offset value (*1)	--adf-front-offset-main	-4 to 4 (*0.5 mm) (Step: 1)	Specify the ADF front side offset value for main scanning (widthways).
		--adf-front-offset-sub		Specify the ADF front side offset value for sub scanning (lengthways).
		--adf-back-offset-main		Specify the ADF back side offset value for main scanning (widthways).
		--adf-back-offset-sub		Specify the ADF back side offset value for sub scanning (lengthways).

No.	Function	Option	Setting value for an argument	Notes
14	Setting the magnification level (*1)	--adf-magnification-adjustment	-3.1 to 3.1% (Step: 0.1)	Specify the ADF magnification level for sub scanning (lengthways).

*1:Only a user with root privileges can set this option.

*2:This is supported with SP-1120N/SP-1125N/SP-1130N/SP-2230N/SP-2240N.

- If you specify two or more options from No.1, No.3, No.4, and No.5 at the same time, only the first option is applied.

For example, when the following command is executed, only the version of the management tool is displayed.

```
pfusconsumables -V --info
```

- If you specify an option from No.1, No.3, No.4, and No.5 and an option from No.6 through No.14 at the same time, the option from No.6 through No.14 is not applied.

For example, when the following command is executed, the version of the management tool is displayed, but the waiting time before the scanner enters power saving mode is not applied.

```
pfusconsumables --sleeptimer 60 -V
```

- Option No.6 and subsequent options can be specified only when the management tool is executed by the superuser (root user). These options cannot be specified by a general user. In addition, No.6 and subsequent options are not displayed when "--help" is specified.
- To output the displayed results of the scanner information into a text file by using the management tool, execute the following command:

Example:"result_of_info.txt" in the following command is an arbitrary text file name.

```
pfusconsumables --info > result_of_info.txt
```

ATTENTION

Make sure that you start the management tool to check the status of the scanner before operating the operator panel or performing a scan with the scanner.

Models and Supported Functions

The models that support each function (option) are shown below.

Function (Option)		Model Name			
		SP-22 30N SP-22 40N	SP-11 20N SP-11 25N SP-11 30N	SP-14 25	SP-11 20 SP-11 25 SP-11 30
Listing the scanners that are connected -L or --list-devices		✓	✓	✓	✓
Specifying a scanner -d or --device-name		✓	✓	✓	✓
Displaying the Help information -h or -help		✓	✓	✓	✓
Displaying the version of the management tool -V or -version		✓	✓	✓	✓
Displaying the scanner information --info		✓	✓	✓	✓
Clearing the counter number for the roller set --roller-set-clear		-	✓	-	✓
Clearing the counter number for the pad unit --pad-clear		-	-	✓	-
Clearing the number of sheets scanned after cleaning --after-cleaning-clear		✓	-	-	-
Clearing the counter number for the brake roller --brake-roller-clear		✓	-	-	-
Clearing the counter number for the pick roller --pick-roller-clear		✓	-	✓	-
Setting the waiting time before the scanner enters power saving mode --sleeptimer		✓	✓	✓	✓
Setting the time period before the scanner is automatically turned off when it is left unused --power-off		✓	✓	✓	✓
Setting the offset value	Setting the ADF front side offset value for main scanning --adf-front-offset-main	✓	-	-	-
	Setting the ADF front side offset value for sub scanning	✓	-	-	-

Function (Option)		Model Name			
		SP-22 30N SP-22 40N	SP-11 20N SP-11 25N SP-11 30N	SP-14 25	SP-11 20 SP-11 25 SP-11 30
	--adf-front-offset-sub				
	Setting the ADF back side offset value for main scanning --adf-back-offset-main	✓	–	–	–
	Setting the ADF back side offset value for sub scanning --adf-back-offset-sub	✓	–	–	–
	Setting the ADF magnification correction --adf-magnification-adjustment	✓	–	–	–

✓:Supported

–: Not supported

Return Values

This section describes the return values of the management tool.

Return value	Description
0x00	Applying the specified settings or clearing the counter was successfully completed.
Value other than 0x00	An error has occurred. Applying the specified settings or clearing the counter failed.

Obtaining the Scanner Information

The commands to obtain the scanner information allow you to obtain the following information.

- Scanner status information ("pfuspgetscstatus" command)

The following command is used to obtain a 4-byte number that indicates the scanner status collected from the scanner every time the "scanimage" command is executed.

The information that can be obtained is identical to the information displayed in the "--get-sc-status" section when "scanimage --help" is executed.

- Scanner error information ("pfuspgetscerror" command)

This command is used to obtain the scanner error information that was generated for the most recent scan.

The information that can be obtained is identical to the information displayed in the "--get-sc-error" section when "scanimage --help" is executed.

Each command is described below.

For details about the scanner information that is obtained, refer to [Values of the Scanner Information to Be Displayed \(page 51\)](#).

Command to Obtain the Scanner Status

The following command is used to obtain a 4-byte number that indicates the scanner status collected from the scanner every time the "scanimage" command is executed.

"pfuspgetscstatus" command

Format

```
pfuspgetscstatus
```

Argument

None

Output format

0XXXXXXXXX

Example

0xB0000000

Return code

0: The command is completed successfully.

Value other than 0: An error occurred while executing the command.

Error message

Error messages output by the SANE API, such as "no SANE device ..." and "Device busy", are displayed.

ATTENTION

Executing this command repeatedly at short 1 second or less intervals puts a heavy load on the system.

Command to Obtain the Scanner Error Information

The following command is used to obtain the scanner error information that was generated during the last scan.

"pfuscgetscerror" command

Format

```
pfuscgetscerror
```

Argument

None

Output format

0XXXXXXXXX

Example

```
JAM
0x03800131
```

Return code

0: The command is completed successfully.
Value other than 0: An error occurred while executing the command.

Error message

Error messages output by the SANE API, such as "no SANE device ..." and "Device busy", are displayed.

ATTENTION

- Executing this command repeatedly at short 1 second or less intervals puts a heavy load on the system.
- The error information regarding the period from the time a scanner is turned on to the time the first scan is performed cannot be obtained.
- When performing a scan continuously, you can only refer to the latest error information.
- Only the user who performed the scan that caused the error can obtain the error information. Other users cannot obtain the error information.

Basic Knowledge for Using Linux Drivers

Scanners on Linux Platform

SANE API

The SANE API is an API for scanners, which is used on Linux OS.

The SANE API can be used to operate a scanner using one of the two methods below.

- Method of using the image scanning application included in Linux OS
Scanning applications (such as "scanimage", "xsane", and "simple-scan") that support the SANE API can usually be used in Linux OS. The scanner can be used from these applications.
For example, by calling the "scanimage" command from the user application, a scanned image can be output as a file. In this case, you can develop your application without any regard to the SANE API.
- Method of creating an application using the SANE API
This driver has functions that call an interface based on the SANE API (14 functions including "sane_open()", "sane_start()", and "sane_read()"). These functions can be used to build a unique application in C language.

The points to take into consideration when using the SANE API are shown below.

- In contrast to the scanner driver for Windows, no GUI setting screen is provided, and the functions are generally limited. Therefore, the scanner driver based on the SANE API is extremely small in size. For this reason, distribution is easy, and it is ideal as an element for creating a system with limited disk resources such as thin clients.
- The driver based on the SANE API cannot create files. Uncompressed images are sent to an application via memory transfer. For this reason, if you need files in a format such as a PDF format, you need to create the files with an application on the calling side. Generally, the Linux OS includes file format conversion tools, and so after scanning, the application calls these tools to create the target file format.

SANE API Function Interface

The Linux driver supports SANE API functions. By calling the functions from an application, the scanner can be controlled.

For details about functions which are provided by the Linux driver, refer to [Using a SANE API Function Interface \(page 16\)](#).

For details about SANE API, refer to the site below. SANE API is in a public domain, and it can be used by anyone.

<http://www.sane-project.org/html/>

Image Scanning Applications

The image scanning applications that can be used in Ubuntu are as follows:

Tool Name	Description
scanimage	Image scanning application for command line based operations. Command line options can be used to specify detailed settings for scanning.
xsane	Image scanning application for a GUI environment. Detailed settings can be specified when scanning in a GUI screen.
simple-scan	Image scanning application for a GUI environment. This has a simple structure, and it is easy to use, but as a result, detailed options cannot be specified.

The above-mentioned applications are all Linux freeware.

PFU uses the above-mentioned "scanimage" and "xsane" to evaluate the Linux drivers, but does not guarantee or support the operations for "scanimage" and "xsane". Nor does PFU provide any support for the above-mentioned freeware applications.

This chapter is intended to explain how to use the Linux drivers. Because it is highly likely that the customer is using these applications, these applications are introduced here.

"scanimage" Usage Examples

This explanation assumes that the computer and scanner are connected by a USB cable and power is being supplied to them.

- 1 Open the terminal software.
- 2 Load documents in the ADF paper chute (feeder).
- 3 Execute the "scanimage" command. Executing this command performs a scanning operation and creates a specified file.

```
scanimage --format=tiff --batch=sample-image.tiff
```

Although the command is shown in multiple lines in the following examples, you must enter the command in a single line when actually entering it.

Example:When scanning with the settings: 300 dpi for the resolution, gray for the image type, red for the dropout, and tiff for the output file format

```
scanimage --mode Gray --resolution 300 --batch=ImageFile-%d.tiff --format=tiff
--dropoutcolor Red
```

Example:When scanning with the settings: 100 dpi for the resolution, color for the image type, 30 for the contrast, and tiff for the output file format

```
scanimage --mode Color --resolution 100 --batch=ImageFile-%d.tiff --format=tiff
--contrast 30
```

In addition to the options supported by the driver, the options for batch processing and other operations by the "scanimage" command itself can also be specified with options. The options are as follows:

Example:

```
root:/home/pfu# scanimage --help
```

```
Usage: scanimage [OPTION]...
```

Start image acquisition on a scanner device and write image data to standard output.

Parameters are separated by a blank from single-character options (e.g.

-d epson) and by a "=" from multi-character options (e.g. --device-name=epson).

-d, --device-name=DEVICE use a given scanner device (e.g. hp:/dev/scanner)

--format=pnm|tiff|png|jpeg file format of output file

-i, --icc-profile=PROFILE include this ICC profile into TIFF file

-L, --list-devices show available scanner devices

-f, --formatted-device-list=FORMAT similar to -L, but the FORMAT of the output can be specified: %d (device name), %v (vendor), %m (model), %t (type), %i (index number), and %n (newline)

-b, --batch[=FORMAT] working in batch mode, FORMAT is 'out%d.pnm' 'out%d.tif' 'out%d.png' or 'out%d.jpg' by default depending on --format
This option is incompatible with --output-file.

--batch-start=# page number to start naming files with

--batch-count=# how many pages to scan in batch mode

--batch-increment=# increase page number in filename by #

--batch-double increment page number by two, same as --batch-increment=2

--batch-print print image filenames to stdout

--batch-prompt ask for pressing a key before scanning a page

--accept-md5-only only accept authorization requests using md5

-p, --progress print progress messages

-o, --output-file=PATH save output to the given file instead of stdout.

This option is incompatible with --batch.

-n, --dont-scan only set options, don't actually scan

-T, --test test backend thoroughly

-A, --all-options list all available backend options

-h, --help display this help message and exit

-v, --verbose give even more status messages

-B, --buffer-size=# change input buffer size (in kB, default 32)

-V, --version print version information

TIP

The "scanimage" command is open source. Any unclear points about an operation can be checked using the source code.

The scanimage for each Linux OS can be obtained from the respective distributor. The latest version can be obtained from the site below.

<http://www.sane-project.org/>

"pfuscgetscerror" Usage Example

An example of the procedure to perform a scan, while checking the scanner error information, is as follows:

- 1 Perform a scan by using the "scanimage" command.**
For details, refer to "scanimage" Usage Examples (page 45).
- 2 Determine whether the return code indicates an error or not.**
If the return code is "0", which indicates successful completion, or "7", which indicates no document, proceed to another operation.
- 3 If the return code indicates an error, check the scanner error information with the "pfuscgetscerror" command and take appropriate measures for the cause.**

Example:When checking the scanner error information according to the return code from the "scanimage" command and take appropriate measures accordingly.

```
while :
do
scanimage --batch-count=1 --batch=Imagefile.pnm
RTN_CODE=$?
if [ $RTN_CODE -eq 0 ]; then
    echo "Scan Success"
else
    if [ $RTN_CODE -eq 7 ]; then
        echo "no document"
    else
        SC_ERROR=`pfuscgetscerror`
        echo "ERROR :" $SC_ERROR
    fi
fi

echo "Next ?"
read a
done
```

"xsane" Usage Example

The procedure for scanning by "xsane" is shown below.


This explanation assumes that the computer and scanner are connected by a USB cable and power is being supplied to them.

- 1 Open the terminal software.
- 2 Execute the "xsane" command. When this is executed, a tool with a GUI setting screen is started.

```
xsane
```

- 3 In the GUI setting screen, check or change the resolution, scan mode, paper size, and other settings.
- 4 Load documents in the ADF paper chute (feeder).
- 5 Click the [Scan] button on the GUI setting screen to start a scanning process.

- 6 Once the scanning process is complete, an operation is performed based on the output method that was set beforehand.

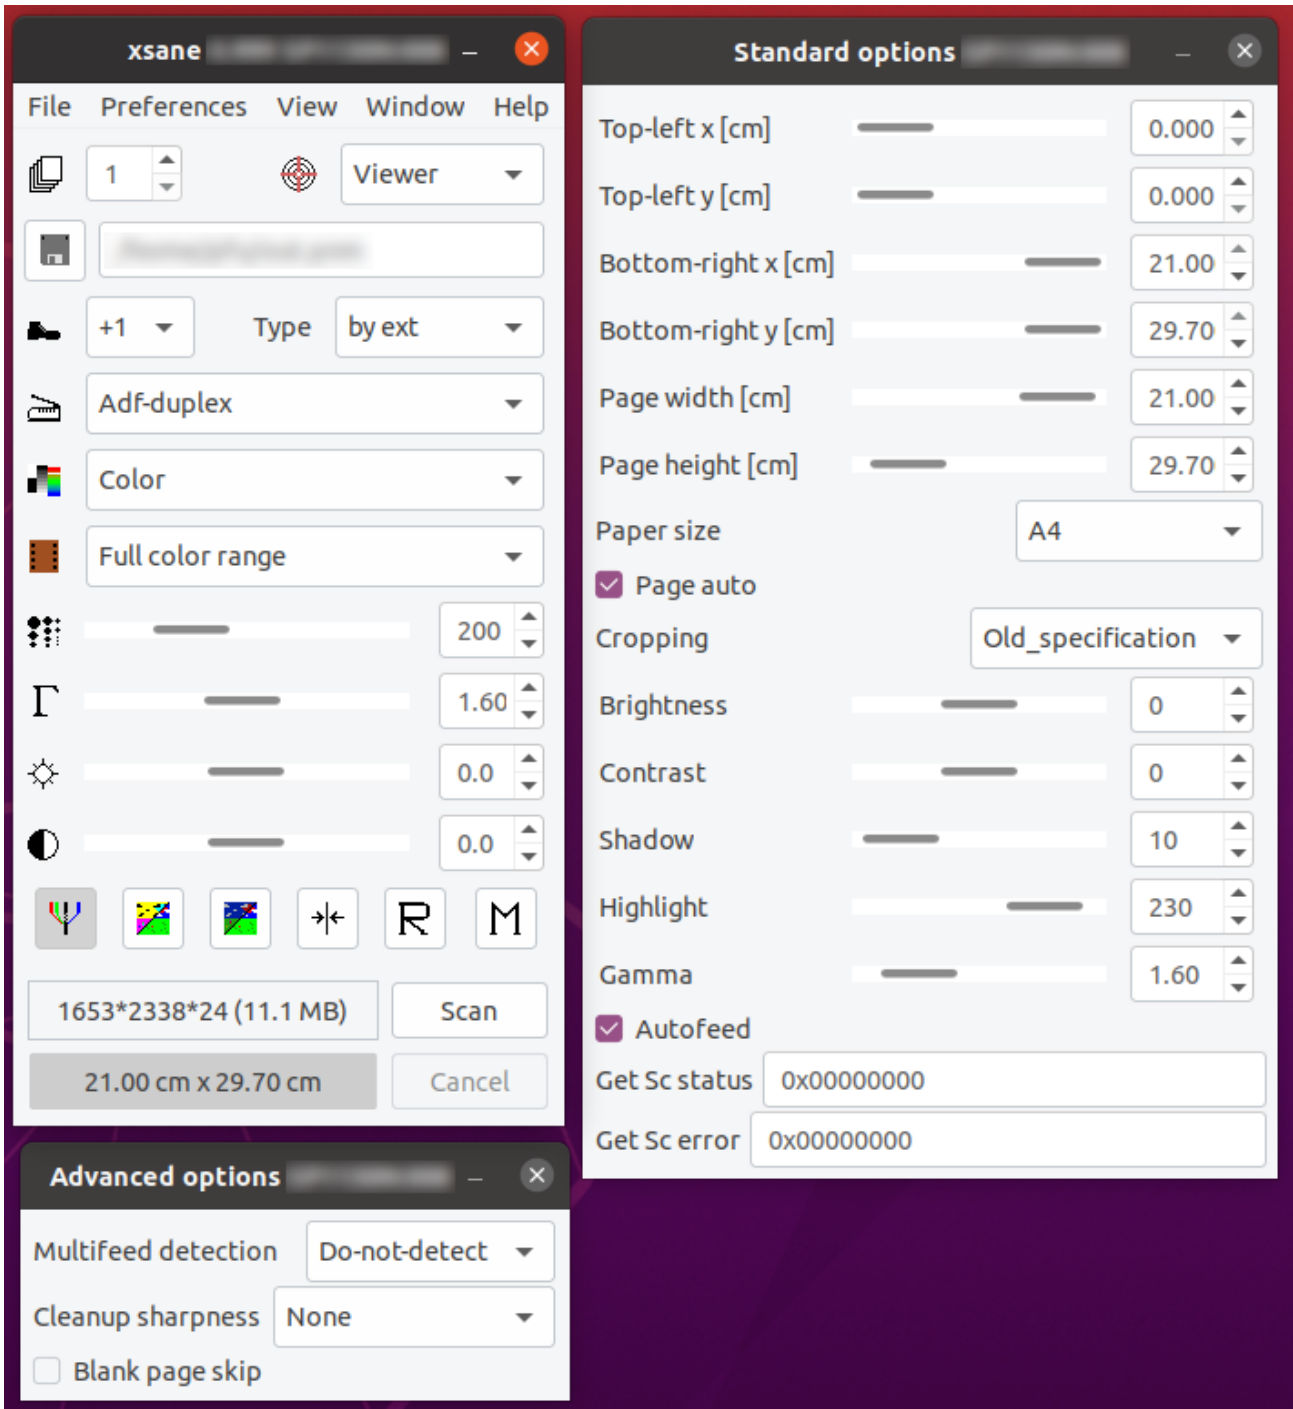

Because xsane is not included in the distribution, it cannot be used immediately after Ubuntu is installed. To use "xsane", the package must be downloaded from the Ubuntu distributor. For the details about how to install "xsane", refer to [Operation verification tools \(page 10\)](#).

Image Conversion of an Output Image

SANE API does not have an interface for outputting a file. As a result, the driver does not have a function to output an image as a file. A scanning application or similar program is required to create a

file. Typical Linux operating systems include tools for image conversion. Some examples are the "convert" command and "mogrify" command provided in ImageMagick (integration software which can create, edit, merge, and convert images). These commands can be used to convert the TIFF file created by "scanimage" to the target format.

Example:Image conversion of a single TIFF file to a JPEG format

```
convert TIFFfilename.tiff JPEGfilename.jpeg
```

Example:Image conversion of all JPEG files in the current directory to a PNG format

```
for pic in *.jpg
do
convert ${pic} `basename ${pic} .jpg`.png
done
```

Example:Image conversion of all TIFF files in the current directory to a JPEG format

```
mogrify -format jpeg *.tiff
```

TIP

- ImageMagick supports more than 100 types of image file formats including GIF, JPEG, JPEG 2000, PNG, PDF, Photo CD, TIFF, and DPX. For details about the usage, refer to the site below.
<http://www.imagemagick.org/>
- ImageMagick may not be installed for certain Linux OS installation methods. If this happens, perform an additional installation using the method for the respective Linux OS. For Ubuntu, ImageMagick can be installed from the Ubuntu Software Center.

Values of the Scanner Information to Be Displayed

This chapter describes the values of the scanner information to be displayed for SP-1120N/SP-1125N/SP-1130N/SP-2230N/SP-2240N, which can be obtained by executing the "scanimage --help" command or the following commands: This feature is not supported on other models.

- "pfuspgetscstatus" command
This command is used to obtain the scanner status.
- "pfuspgetscerror" command
This command is used to obtain the scanner error information.

SP-1120N/SP-1125N/SP-1130N/SP-2230N/SP-2240N

The values of the scanner information to be displayed for SP-1120N/SP-1125N/SP-1130N/SP-2230N/SP-2240N are shown below.

- **Values of the scanner status to be obtained**

A value in a hexadecimal number consisting of bits is displayed for each event. In practice, a combination of multiple events (multiple numbers consisting of bits) is displayed.

Values other than the values shown below may be displayed.

Value of the Scanner Status to Be Obtained	Meaning
0x80000000	The ADF paper chute (feeder) does not have any documents.
0x20000000	The ADF cover is open.

- **Values of the scanner error information to be obtained**

The values of the scanner error information to be displayed are shown below. Values other than the values shown below may be displayed.

If the same value is displayed repeatedly even after the scanner is restarted, contact the distributor/dealer where you purchased your scanner.

Value of the Scanner Error Information to Be Obtained	Meaning	Error Code in the SANE API	Corrective Action	Model Name	
				SP-2230 N	SP-1120 N
0x00000000	None	SANE_STATUS_GOOD	Not needed.	✓	✓
0x03800240	The ADF is open.	SANE_STATUS_COVER_OPEN	Close the ADF, and then try scanning again.	✓	✓
0x03800320	The ADF paper chute (feeder) does not have any documents.	SANE_STATUS_NO_DOCS	Load some documents in the ADF paper chute (feeder).	✓	✓
0x03802078	The cancel button on the scanner was pressed.	SANE_STATUS_CANCELLED	Remove the documents, and	✓	✓

Value of the Scanner Error Information to Be Obtained	Meaning	Error Code in the SANE API	Corrective Action	Model Name	
				SP-2230 N SP-2240 N	SP-1120 N SP-1125 N SP-1130 N
			then try scanning again.		
0x03800131	A paper jam occurred.	SANE_STATUS_JAMMED	Readjust the documents, and then try scanning again.	✓	✓
0x0380013F				✓	–
0x03800150				✓	–
0x03800140				✓	–
0x03800755	A multifeed (Overlap) was detected.		Remove the documents which are stopped in a multifeed state, check the scanned images, and then load the documents again.	✓	✓
0x03800756				✓	–
0x03800804	The sensor(s) are dirty.	SANE_STATUS_IO_ERROR	Clean the scanner, and then try scanning again.	✓	–
0x0380085F	Switching the feed mode switch was detected.		Set the feed mode switch correctly, and then try scanning again.	✓	–
0x00000000	An error occurred during communication.		Turn off the computer and the scanner, and then reconnect the USB cable to them. After that, turn on the computer and the scanner, and then try scanning again.	–	✓

Value of the Scanner Error Information to Be Obtained	Meaning	Error Code in the SANE API	Corrective Action	Model Name	
				SP-2230 N	SP-1120 N
				SP-2240 N	SP-1125 N SP-1130 N
0x04803000	An undefined error occurred.		If the same value is displayed repeatedly even after the scanner is restarted, contact the distributor/dealer where you purchased this product.	–	✓

✓:Supported

–: Not supported

Customer Support

- **Contacts for Inquiries**

For inquiries regarding an Image Scanner SP Series, refer to the following website:

Contact for Inquiries	https://www.pfu.ricoh.com/global/scanners/sps/support/
------------------------------	---

If you cannot find the information for inquiries on the above website, refer to the website below:

Contact for Inquiries	https://www.pfu.ricoh.com/fi/r/ctl/
------------------------------	---